

CC Skywave - Reset Addendum - Please Read

If you find the need to completely reset the CC Skywave back to original factory default settings, follow the instructions below:

With the power OFF, press and hold memory buttons #4  and #6  until the radio beeps four times and the display flashes.

We want to provide you with the best possible buying experience. If you need any help using your product or have any questions, please call us at 1-800-522-8863; our technical staff is available Monday – Friday 9AM – 5PM Pacific Time.

Or if you prefer, you may email us at customerservice@ccrane.com.

Respectfully Yours,
C. Crane Company, Inc.