## Getting to know your SOFTSPEAKER<sup>™</sup> 3

PLEASE READ INSTRUCTIONS AND SAVE THEM FOR FUTURE REFERENCE.

| A | Power Button – Press briefly to turn 'ON' the Amp for one hour. Extend time by holding the power button longer: (1 light = 1 hour), (2 lights = 4 hours), (3 lights = 8 hours). The sleep timer is always set to save batteries.                                       | A          | B        |
|---|--|------------|----------|
| B | Indicator Lights – Briefly lit to show sleep timer hours when POWER button is held and<br>battery life when BATTERY button is held. Middle light is always lit<br>to show when power 'ON'.   |            | E        |
| C | Volume Control – Changes volume when dial is rotated.  |            |          |
| D | Battery Tester – Press and hold to check battery life: (1 indicator light = 1% - 33%)<br>(2 lights = 34% - 66%), (3 lights = 67% - 100%)   |            | F        |
| E | TONE Switch – Changes tone between 'Voice' (up position) and 'Music'<br>(down position). The 'Voice' setting is tuned for listening to audio books and<br>talk radio. The 'Music' setting provides full range audio with a boost but<br>consumes about 50% more power. |            | <b>G</b> |
| F | AMP Switch – Allows you to bypass the amplifier when used without batteries. The Volume control will still operate when AMP is off.  | <u>*</u> ) |          |
| G | Batteries – Requires 2 AAA (Alkaline or NiMH) batteries. See battery<br>orientation in diagram on this page. Battery life is about 80 hours when<br>using the 'Voice' tone setting.  |            |          |
| H | Battery Compartment Cover – Push indented arrow and slide down to remove cover.  |            |          |
|   |  |            |          |

C.CRANE


800-522-8863

ccrane.com

11

## $\textbf{SOFTSPEAKER}^{\text{\tiny M}} \ \textbf{3} \ \text{amplified pillow speaker}$

- 1. Make indent in your pillow
- 2. Place SoftSpeaker on indented area with pocket side down
- 3. Connect plug to standard 1/8" (3.5mm) headphone jack on audio source (Radio, Phone, Tablet, TV, Computer, Etc.)

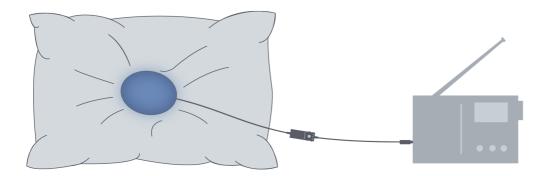

CAUTION! - Continuous use at high volume may damage hearing

Copyright 2017 by C. Crane Company, Inc., Fortuna, CA 95540 All rights reserved. No part of the booklet may be reproduced, in any form or means whatsoever, without permission in writing from C. Crane Company Inc.

## Specifications:

Sensitivity: 115 dB

Frequency: 20-20,000 Hz

Impedance: 32 Ohm

Cable length: 78"

Driver unit: 38mm

Warranty: 1 Year

Specifications are subject to change without notice.

