



1001 Main Street Fortuna, CA 95540-2008 (707) 725-9000

Website: ccrane.com Email: ccraneco@aol.com

 


# Important Information About Your Custom Quarter Speed Cassette Player/Recorder

Please keep this sheet for future reference.

Thank you for purchasing your Custom Quarter Speed Cassette Player/Recorder from the C. Crane Company. You will be able to play and record regular speed and quarter speed cassette tapes with this unit. The operation manual does not cover the quarter speed functions. To help you get started with the quarter speed functions we have included these instructions. Please refer to your operation manual for all other instructions.

### Playing/Recording Cassettes at Quarter Speed

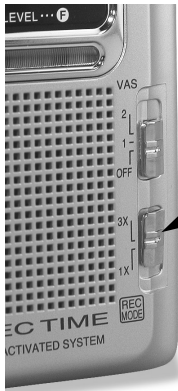

Quarter Speed Switch

The quarter speed switch is located on the front of the player labeled REC MODE. The original 3X - 1X switch has been converted to the quarter speed (4X) - 1X switch.

### To Record in Quarter Speed

Insert your cassette, release the Pause

Switch, select the Mic Level, set the Rec Mode switch to 3X, and press Record.

### To Play Back Quarter Speed Recordings

Insert your cassette, release the Pause Switch, select the Mic Level, set the Rec Mode switch to

3X, and press Play.

If the playback speed is too fast, make sure the quarter speed switch is in the 3X position.

This player/recorder does not have an auto reverse.

C. Crane Company's SoftSpeaker Pillow Speaker and most other types of mono and stereo earphones work well with this Quarter Speed Cassette Player/Recorder.

### Warranty Information and Notes

If you have any difficulty with your player, please call us at 1-800-522-8863. C. Crane Company will provide you with the same warranty coverage provided by Panasonic, which is outlined in your operation manual. Please do not call Panasonic for warranty service, as C. Crane Company has customized this product.