



1001 Main Street Fortuna, CA 95540-2008 (707) 725-9000


Website: ccrane.com Email: ccraneco@aol.com

220' LOOP KIT


(WITH RECOMMENDED LIGHTNING PROTECTION)



- Never mount an antenna near power lines!
- If a power line breaks and falls, make sure it cannot hit your antenna!
- If your antenna falls, make sure it cannot hit a power line!

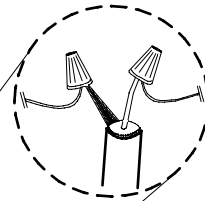


Enlarged View

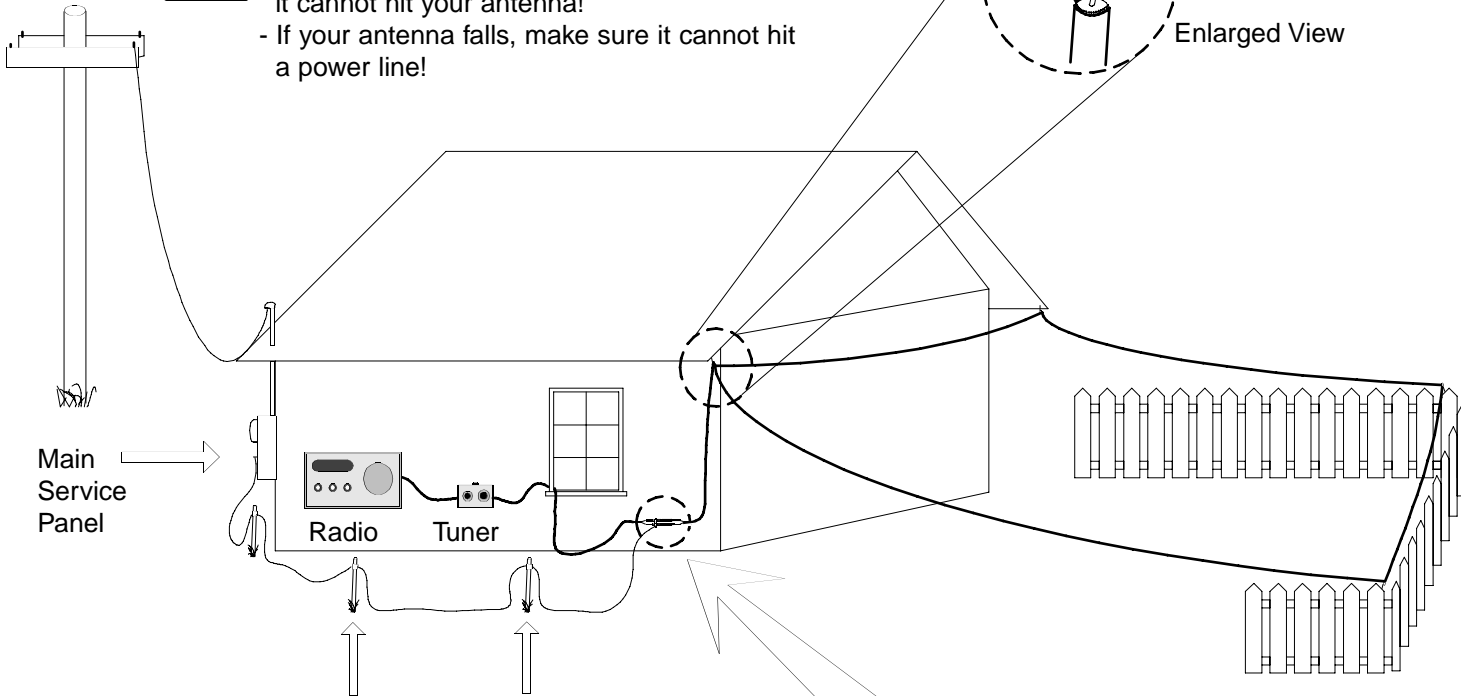

- Ground rods are driven 8 feet into ground and are placed 16 feet apart.
- Connect the two additional ground rods to the "Main Service" ground rod as illustrated.
- All wire used for grounding should be #10 or larger solid copper.

Double FCD

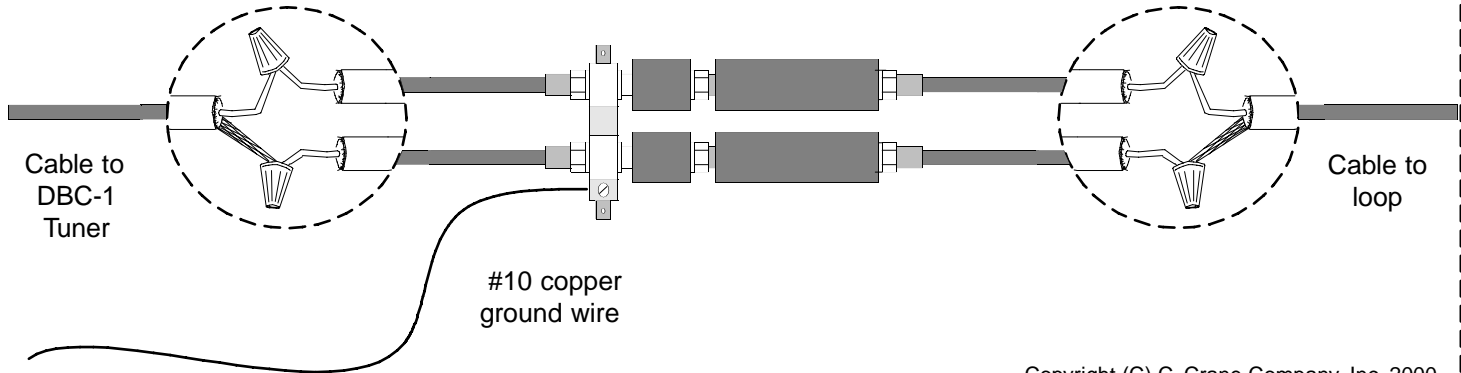

HOW TO INSTALL AN "F" CONNECTOR

